

QUICK CASH STORED WATER NON-METERED FOR EATON COOPER Model #6600FRN

- Wright Hennepin Cooperative Electric Association will not be responsible
 or liable for any personal injury or property damage in the wiring of
 or the operation of this or any Energy Savings Program. Wright
 Hennepin recommends the use of a licensed electrical
 contractor.
- 2. All wiring must meet N.E.C. (National Electrical Code) and be inspected by a state electrical inspector before Wright Hennepin will check out installation, credit KWH usage or issue any applicable rebates.
- 3. Load Control Switch must be mounted outside of home and 4' to 6' above the ground.
- 4. The (A) phase of water heater power is wired in series with the blue wires of the radio receiver.
- 5. A red light indicates that a load is being controlled.
- 6. Water heater circuit powers load control switch.

GREEN LIGHT INDICATES POWER TO SWITCH.

WATER STORAGE WHEN THE RED LIGHT IS ON THE WATER HEATERS ARE TURNED OFF

Red ____ 240 V.A.C. POWER



WRIGHT HENNEPIN COOPERATIVE ELECTRIC ASSOCIATION
Energy and Services Department
1-800-943-2667