

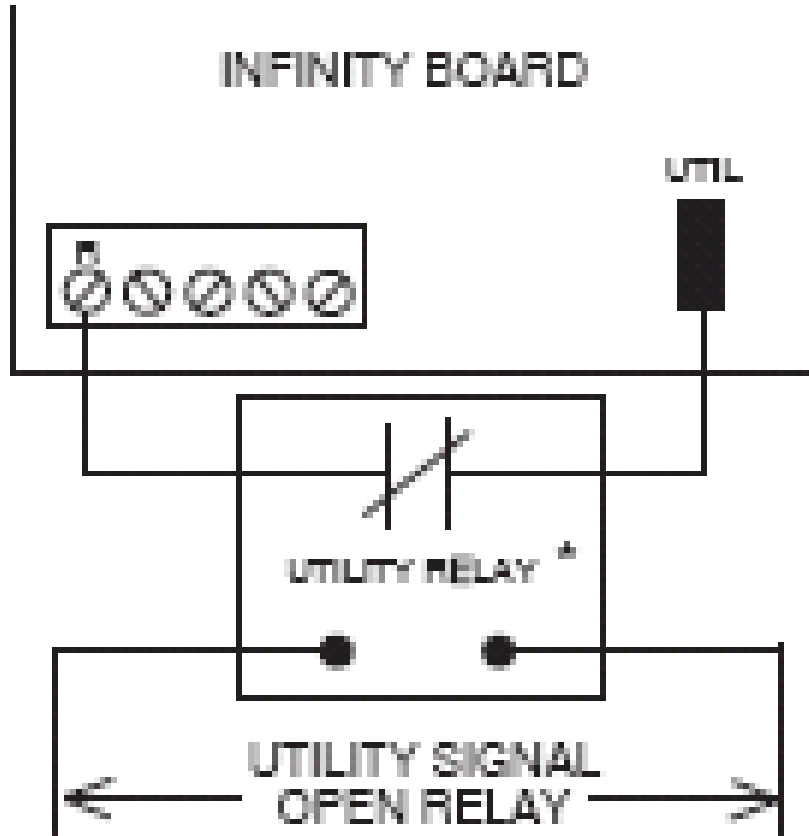


# Single Stage Unit

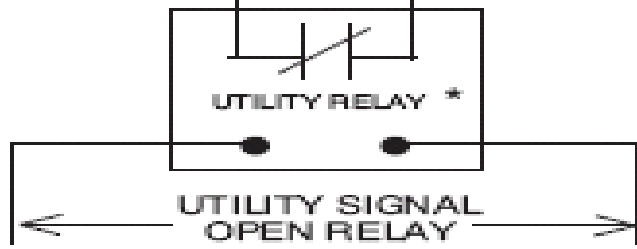

\* SUPPLIED BY UTILITY PROVIDER

# Two Stage Unit

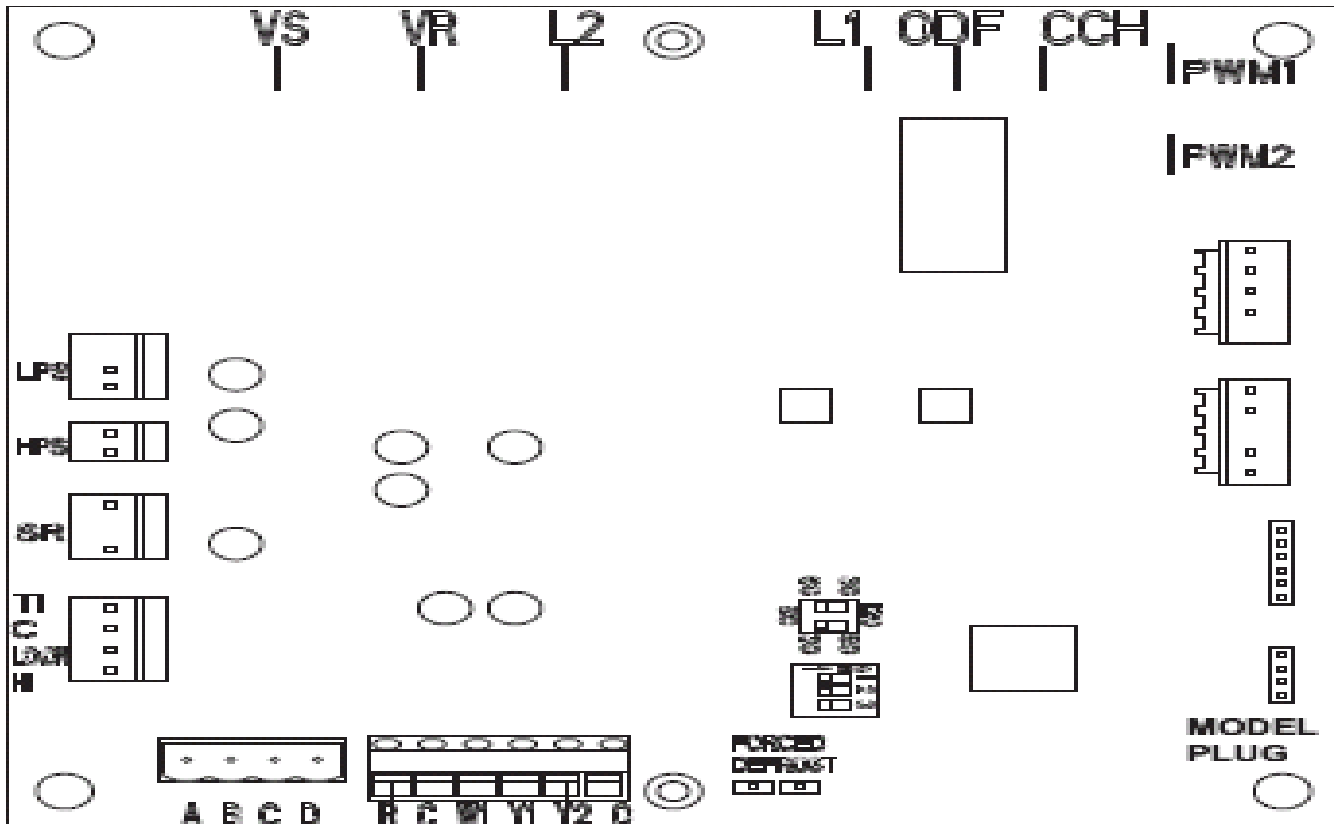

\* SUPPLIED BY UTILITY PROVIDER

## **Set-Up of the Infinity**

1. Hold the advanced button for 10 seconds.
2. Push the scroll key, select set up.
3. Push the select button on the side.
4. Use the scroll key to the utility saver.
5. Push the select button on the side.
6. Use the temp up-down key set to turn off or enable.
7. (If two stage, use scroll key. Select turn off.)
9. Push advanced to exit.
10. Push save changes {Done}